




How To Measure

Blinds, CitySimple & Roller Shades

Measuring Considerations

When ordering for inside mount, the shade fabric will be slightly smaller in width. This will cause small light gaps on each side


When taking measurements, round down to the nearest 1/8" of an inch each for the best fit.

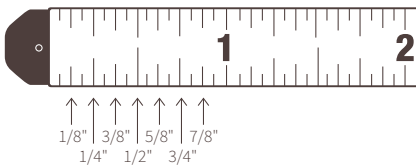

Need Assistance?

Feel free to contact a City Shade Associate for help with Installing.
(877)-224-8974
support@cityshadecompany.com
www.cityshadecompany.com


Inside Mount

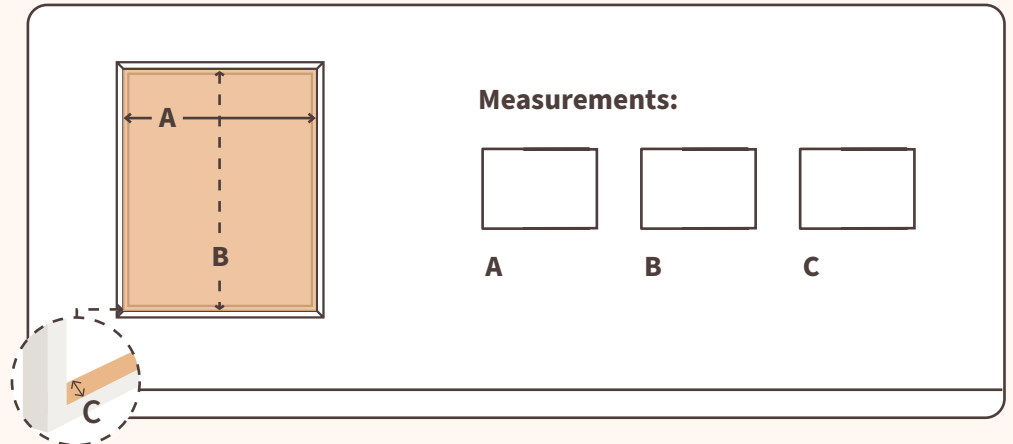

Step A - Measure the top width inside the window opening. If tiles or other materials cover part of the inside of the opening, consider measuring the opening at its narrowest spot and record that measurement.


Step B - Measure the middle height inside the window opening.

Measurements:

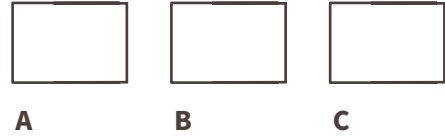

Step C - Measure depth of window opening from the front edge back to the first obstruction. To mount inside the window frames, minimum depth of 3/4" is required. Consider obstacles such as cranks, handles and window opening direction.

Outside Mount

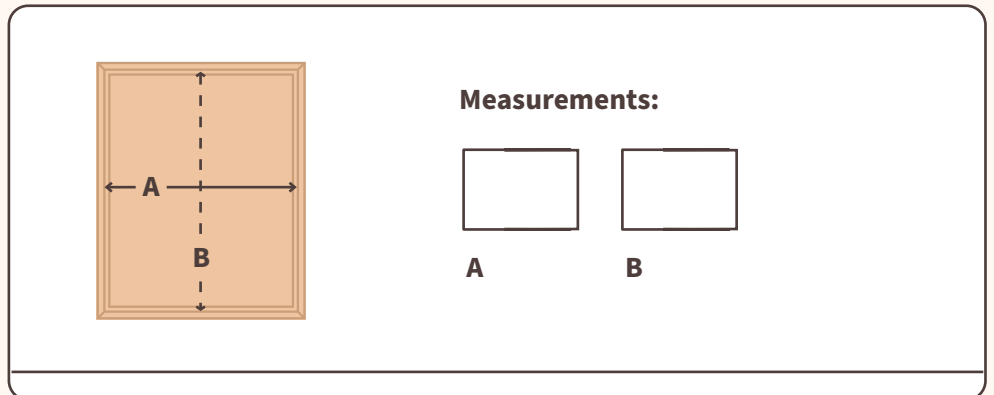

Step A - Measure the width of the window opening. For windows without trim add 2-4" per side, for windows with trim measure to outer edges of trim.

Step B - Measure the height of the window opening. For windows without trim add 4", for windows with trim measure to the outer edges of trim.

Note - A flat surface is required, on the frame or the wall. Consider mounting direct on the frame if the frame protrudes more than 1" from the wall.